

**FIBER OPTIC TEMPERATURE SENSOR
FOR HERO/RADHAZ APPLICATIONS**

Compatible with Opsens' GaAs (SCBG) RadSens signal conditioner

Key Features

- Fast response time
- Small and robust design
- Resolution of < 35 dB below NFT
- Complete immunity to mechanical vibration and multiple optical connections
- Intrinsically safe
- Immune to EMI, RFI and electrical interferences

Applications

- HERO/RADHAZ assessment
- Electronic Explosive Devices type application
- Dynamic temperature monitoring application
- Surface point temperature type application

Description

Opsens' OTG-R fiber optic temperature sensor offers the highest performances in the industry. The probe is perfectly tailored for reliable measurement of Electromagnetic Environmental Effects on Electrically Initiated Devices (EID's). The OTG-R sensor uses the well proven technique based on the temperature-dependent bandgap of GaAs crystal as the temperature transduction mechanism. Its small sensing GaAs crystal located at the tip of the optical fiber makes it convenient for bridge wire assembly and temperature monitoring for HERO/RADHAZ applications.



Opsens' OTG-R is immune to mechanical vibration and accepts extension cables without any signal degradation. With a high response time of < 275 ms for MK1 and high resolution of < 35 dB below NFT, the OTG-R delivers unprecedented repeatability and reliability in the most adverse conditions such as high level of EM, RF, MR and microwave field environments.


The OTG-R is made with industry standard optical fiber and is compatible with Opsens' GaAs (SCBG) RadSens signal conditioner. This compact and robust fiber optic temperature sensor is available with different optical cables and sheath options and is customizable according to customer specific applications.

Opsens offers not only customized OTG-R sensors, we also provide custom installation services on a variety of EEDs available in the market.

Opsens

2014 Cyrille-Duquet Street
Suite 125
Quebec City QC
G1N 4N6 Canada

 1.418.682.9996
 1.418.682.9939
Info@opsens.com
www.opsens.com

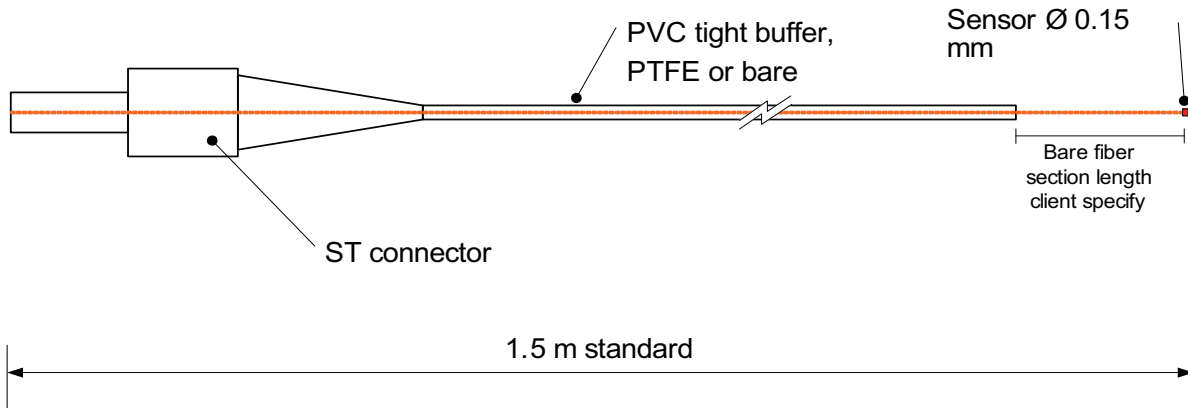

Specifications

Temperature operating range	0 °C to +120 °C (higher temperature ranges available upon request)
Resolution	< 35 dB below NFT
Response time	< 10 ms
MRI/EMI/RFI susceptibility	Complete immunity
Cable length	1.5 meters standard (other lengths available)
Optical connector	ST standard
Sensor diameter	0.15 mm O.D. (smaller version available upon request)
Cable sheathing	PVC tight buffer (other option available)
Signal conditioner compatibility	Opsens GaAs (SCBG) RadSens signal conditioner

All specifications are subject to change without prior notifications